Ozeri®

Electric Wine Opener

Model No. OW05A

Thank you for purchasing an Ozeri Electric Wine Opener. Please read all the instructions before attempting to operate this product and save these instructions for future reference.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following:

WARNING: To reduce the risk of fire, electrical shock, or injury read all the instructions before use:

- This product is not a toy. Keep out of reach of children.
- Do not operate electric wine opener with a damaged cord or plug, after the appliance malfunctions or if it is dropped or damaged in any manner. Return appliance to the nearest authorized service center for examination and repair.
- To protect against risk of electrical shock, do not put the electric wine opener in water or any other liquid. This may cause personal injury and/or flammable fumes.
- To protect against fire, do not operate the unit in the presence of hazardous materials and/or extreme temperatures.
- This product is intended for normal domestic household use only. Do not use the electric wine opener for other than its intended use.
- When using or recharging the electric wine opener keep your workspace clean and free from potential hazards.
- For indoor use only. Do not expose the electric wine opener or charging unit to rain or other extreme conditions.

- Never force the electric wine opener onto a bottle or attempt to speed up the motor. The electric wine opener will work best when it is operated at its intended speed.

- Do not touch or adjust the electric wine opener's motor or the corkscrew spiral. Only hold the electric wine opener by its outer housing and its indicated grip.

- Do not attempt to open bottles if the up/ down button is not working.

- Do not attempt to disassemble the electric wine opener or the recharging unit. It has no serviceable parts. Your electric wine opener is guaranteed for one year. In the event of a malfunction during your warranty period, please contact our customer service department.

- Only recharge the electric wine opener using the recharging unit supplied.

- Always unplug the charger if you do not intend to use your corkscrew for a long period. To disconnect from the power supply, grip the transformer and pull from the power socket.

- Never remove the plug from socket by pulling the power cord.

- Store the appliance in a cool, dry and safe place.

FEATURES AND FUNCTIONS

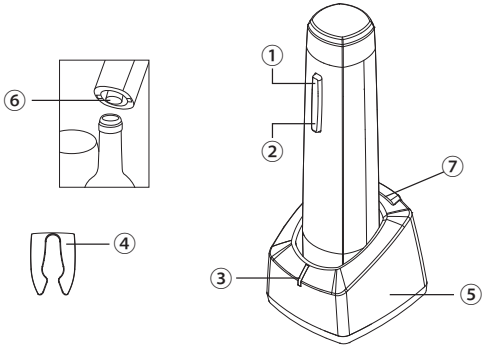

1	Upper Button
2	Lower Button
3	Red/Green LED Charging Light
4	Foil Cutter
5	Charging Base
6	Cork Screw Spiral
7	Foil Cutter Storage
8	Charging Adaptor

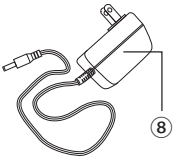

PRODUCT FEATURES

- Rechargeable motorized wine opener
- Innovative ergonomic design
- Easy one-touch button operation
- Red/Green LED charging light
- Charging base with built-in foil cutter
- Charging adaptor
- Built-in rechargeable Ni-MH battery

PREPARATION BEFORE USE

Follow the instructions below to charge the Ozeri Electric Wine Opener before using it for the first time.

1) The charging adaptor and charging base. Insert the charging adaptor DC jack to the charging base (at back of the base).

2) Place the wine opener into the charging base and ensure that it is firmly in position and fully engaged with the charging base.

3) Insert the other end of the charging adaptor to a power socket. A red LED light in the base will flash to indicate the unit is charging. The electric wine opener requires 12 hours to fully charge before first use.

4) The red LED light will change to green when the wine opener is fully charged. The electric wine opener can be partially recharged after each use. For the best battery performance, periodically discharge the battery by using the wine opener until the motor begins to slow down.

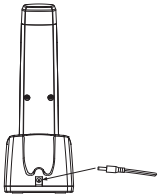

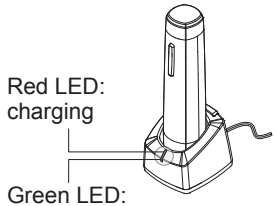

OPERATING INSTRUCTIONS

CONNECTION AND USE

We recommend that you charge your electric wine opener for 12 hours before using it for the first time. Please follow instructions for recharging below:

RECHARGING YOUR ELECTRIC WINE OPENER

Plug one end of the adapter cord into the base of the charging unit and the other end into the main socket. Place the electric wine opener into the recharging unit while making sure that it is firmly in position and that it is fully engaged with the recharging connections.The red LED light will change to green when the wine opener is fully charged. When your electric wine opener is fully charged, it can be used to open up to 80 bottles.

OPERATING YOUR ELECTRIC WINE OPENER

The electric wine opener is operated by a single up/down button. The button has two functions. With the Ozeri Electric Wine Opener securely placed on top of an unopened wine bottle, press the lower part of the button (down button) to remove the cork from the bottle. Pressing the upper part of the button will release the cork from the Ozeri Electric Wine Opener after you have removed it from the bottle.

1) Before removing the cork, remove any foil from the bottle using the foil cutter provided.

2) Place the electric wine opener on top of the wine bottle making sure that it remains as upright as possible at all times. If you hold the electric wine opener at an angle to the bottle, it will not remove the cork properly. Hold the electric wine opener firmly and press the lower part of the button. The corkscrew spiral will turn in a counterclockwise direction and enter the cork, then gradually remove it from the bottle. When the electric wine opener's motor has stopped, the cork has been fully removed from the bottle.

3) Lift the electric wine opener away from the bottle. To remove the cork, simply depress the upper part of the button. The spiral will turn in a clockwise direction and release the cork.

4) Return the electric wine opener to the recharging unit when not in use. The recharging unit will help prevent the wine opener from accidentally tipping over. While the electric wine opener can be partially recharged after each use, periodically discharging the battery by using the wine opener until the motor slows down will maximize battery performance.

NOTE: To ensure proper cork removal, always hold the Electric Wine Opener directly over the bottle in a vertical orientation, thereby avoiding angles. The electric wine opener may experience problems with a small percentage of plastic/synthetic and undersized corks. If this is the case, the cork should be removed manually.

WARRANTY INFORMATION

Your “Ozeri Electric Wine Opener” is warranted to the original owner for 1 year from the date of purchase against defects in material and workmanship under normal use and service. Should your Electric Wine Opener prove defective within 1 year from the date of purchase, return the defective part or unit, freight preparid along with an explanation of the claim to “Ozeri Electric Wine Opener.” Please pack your Electric Wine Opener carefully to avoid damage in transit. Under the warranty, Ozeri will repair or replace any parts found to be defective due to maufacturer’s defect. This warranty extends only to personal use and does not extend to any product that has been used for commercial use, rental use, or use which is not intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable. Ozeri is not responsible in any way for damages, losses or inconveniences caused by equipment failure or by user negligence, abuse, or use not in accordance with the “User Guide” or any additional safety, use, or warnings included in the product materials. Further, Ozeri is not liable for incidental or consequential damages of any nature resulting from the use of this product and any liability shall not exceed the purchase price of the product.

THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING:

- Damage due to accident, misuse, abuse, alterations or vandalism.
- Improper or inadequate maintenance.
- Unauthorized modification or commercial use.
- Damage in return transit
- Unsupervised use by children under 18 years of age

Ozeri Electric Wine Opener
Costumer Service: 1-877-299-1296 or
Email: support@ozeri.com

(Ozeri™ and its subsidiaries assume no liability for damage caused by the use of the Ozeri Scale other than for its intended use or as instructed above and in the User Manual.)

Ozeri

Aerating Wine Pourer

USER'S MANUAL

Included with the Ozeri Electric Wine Opener OW05A

USING THE OZERI AERATING WINE POURER

The Ozeri Aerating Wine Pourer couples style with functionality, and effortlessly aerates wine as it is being poured. To use the Ozeri Aerating Wine Pourer, simply insert the pourer into the neck of your wine bottle and pour. When the wine travels through the pourer, it will be aerated before it reaches your glass, improving flavor and bouquet, and thereby reducing the time needed for the wine to breathe.

- The device is not a toy. Keep away from children.
- Do not use this device for anything other than its intended purpose.
- Do not expose this device to extreme temperatures.
- Always store this device in a cool, dry place.
- To clean, rinse thoroughly with warm clean water and dry with a soft, dry cloth. Do not use abrasive cleaning agents.
- Do not place this device in a dishwasher.